


JUSTERING AV UDRAGSFÖRVARING. ADJUSTMENT OF SIDE STORAGE.

M403-1

**HORR
EDS**
1936

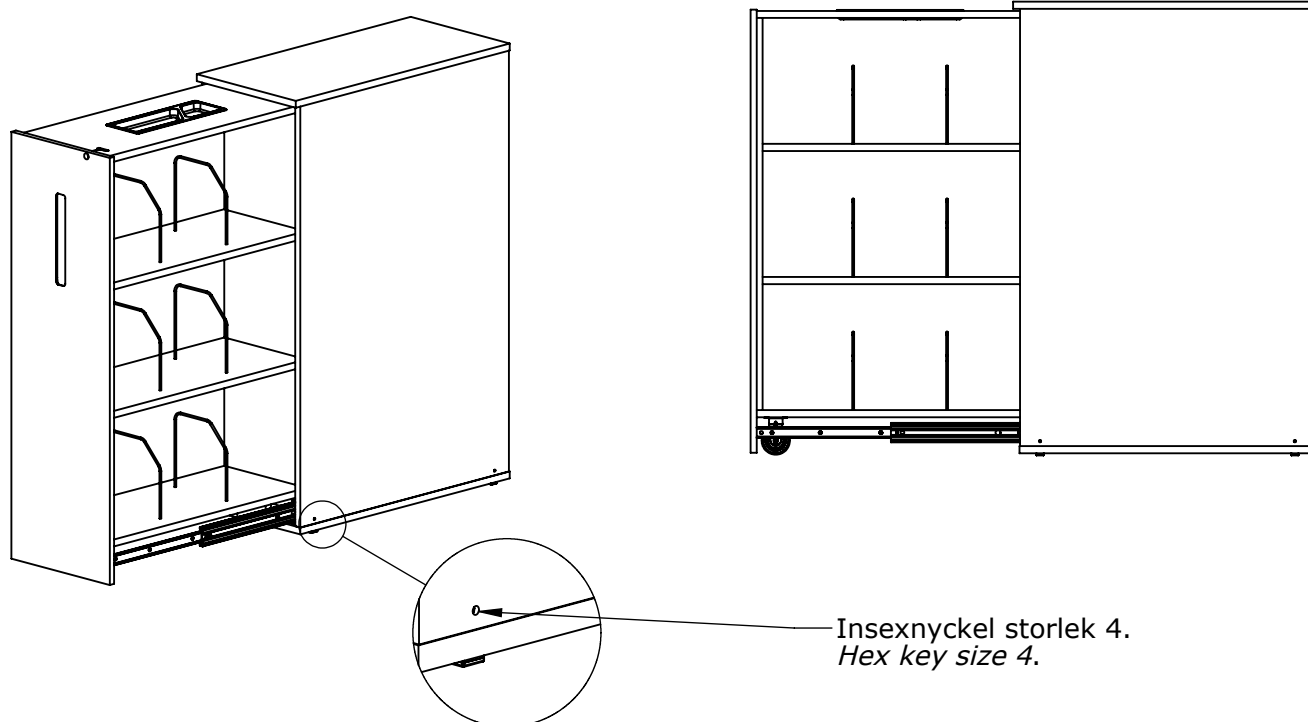

När förvaringen skickas ifrån fabrik är ställskruvarna justerade för hårda golv.
Om enheten skall placeras på mjukt golv (matta/teppe) så behöver ställskruvarna justeras upp.
Detta för att utdraget inte skall bli för tungt att dra ut.
Justeringen görs med insexnyckel nr 4 nedtill på långsidorna (2 st hål på varje sida).

För att få utdraget att rulla så lätt som möjligt bör inte hjulet ta i golvet
förrän det är utdraget ca 20-30 cm från själva skalet.

Det kan också vara så att förvaringen efter en tids användande
fått tyngre innehåll och behöver justeras upp p.g.a detta.

*When the storage is sent from factory the adjustment screws are adjusted for hard floors.
If the unit shall be placed on soft flooring (carpet) the adjustment screws needs to be turned
up. Adjustment is made with a hex key size 4 at the bottom of the long sides (2 holes on each
side).*

*To make the extract unit to move as smoothly as possible the wheel should not touch the floor
until it's been extracted approx 20-30cm from the shell.*

*It might also be necessary to adjust when it's been in use for some time and the weight of
content has increased.*